

**STAINLESS STEEL GATE VALVE PN16**



**Lloyd's  
Register**

PED 97/23/CE



- Size :** DN 1/2" to 2"  
**Ends :** Female - Female BSP  
**Min Temperature :** - 20°C  
**Max Temperature :** + 180°C  
**Max Pressure :** 16 Bars  
**Specifications :** Rotating non rising stem  
Inside screw stem  
Full bore  
**Materials :** Stainless steel

**STAINLESS STEEL GATE VALVE PN16**


**SPECIFICATIONS :**

- Full bore
- Rotating non rising stem
- Inside screw stem
- Screwed bonnet
- Single wedge
- Female / Female BSP cylindrical
- PTFE packing

**USE :**

- For all common fluids
- Min and max Temperature Ts : - 20°C to + 180°C
- Max Pressure PN : 16 bars

**HEAD LOSS GRAPH :**

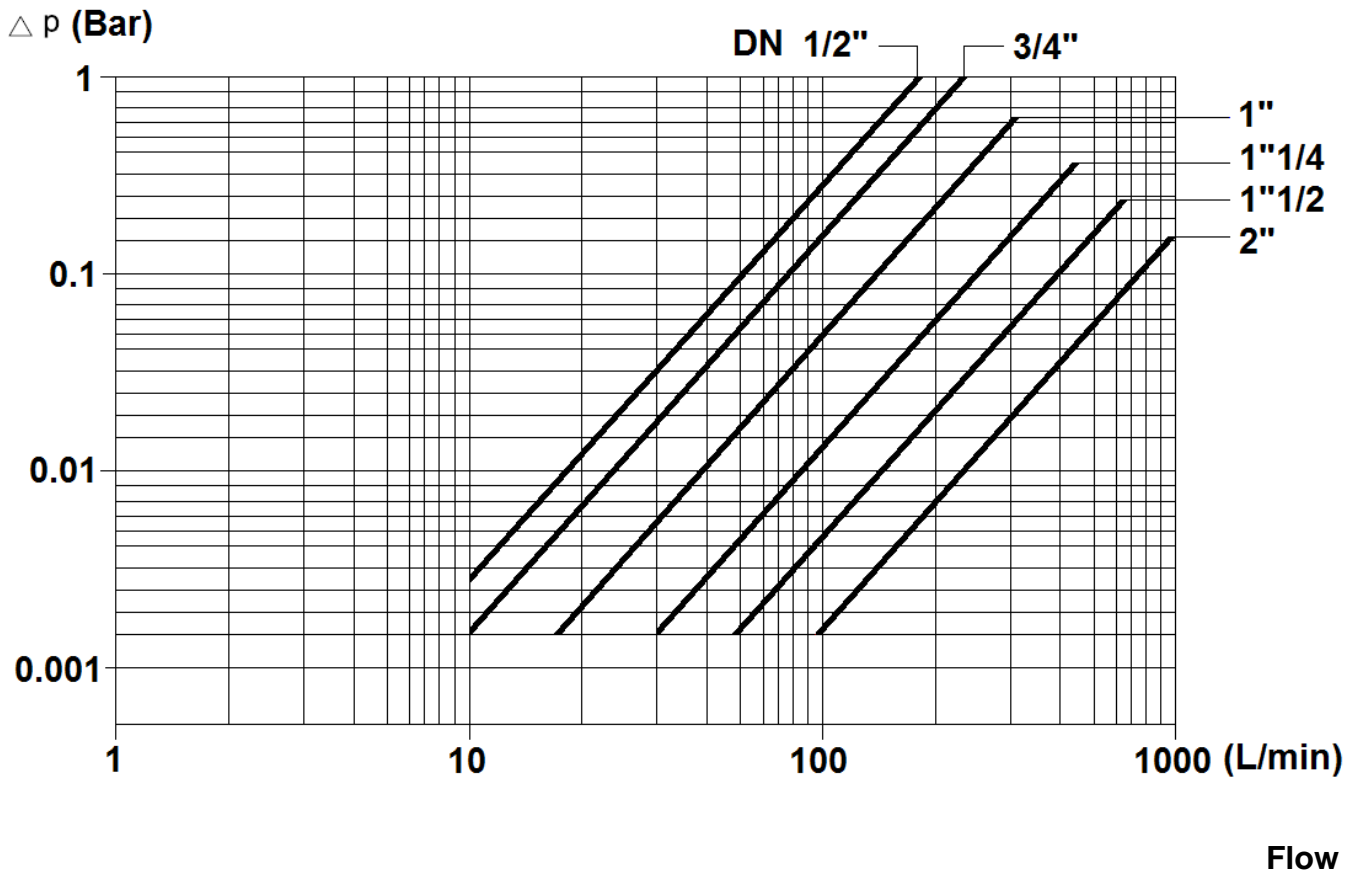


**STAINLESS STEEL GATE VALVE PN16**

FLOW COEFFICIENT Kvs ( M3 / h ):

| DN           | 1/2"  | 3/4"  | 1"    | 1"1/4 | 1"1/2  | 2"  |
|--------------|-------|-------|-------|-------|--------|-----|
| Kvs ( m3/h ) | 19.18 | 35.43 | 57.72 | 96.69 | 154.63 | 254 |

PRESSURE / TEMPERATURE GRAPH (STEAM EXCLUDED):

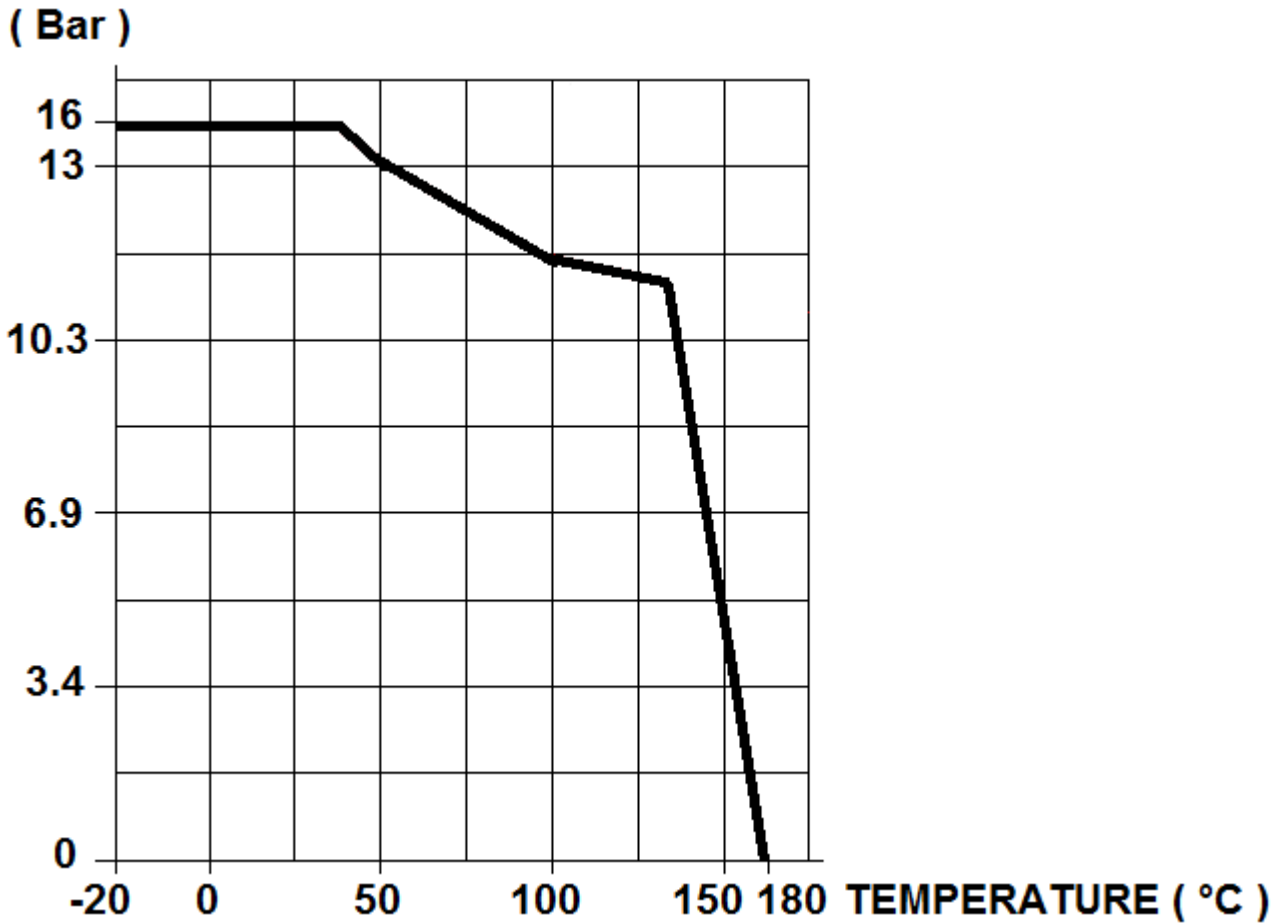


RANGE :

Female / female threaded BSP cylindrical Ref. 106 from DN 1/2" to DN 2"

**STAINLESS STEEL GATE VALVE PN16**


**MATERIALS :**

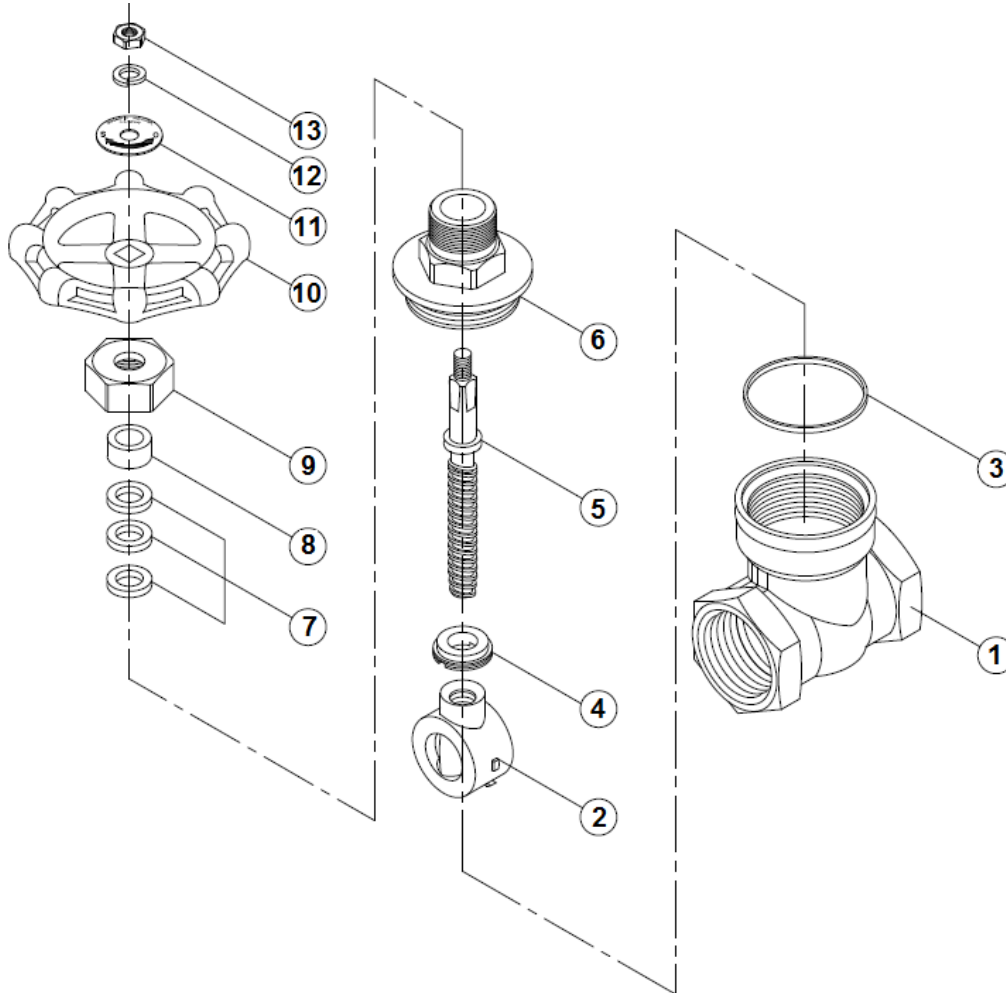

| Item | Designation      | Materials      |
|------|------------------|----------------|
| 1    | Body             | ASTM A351 CF8M |
| 2    | Wedge            | ASTM A351 CF8M |
| 3    | Body gasket      | PTFE           |
| 4    | Nut              | SS 304         |
| 5    | Stem             | SS 316         |
| 6    | Bonnet           | ASTM A351 CF8M |
| 7    | Packing          | PTFE           |
| 8    | Gland follower   | SS 304         |
| 9    | Packing nut      | SS 316         |
| 10   | Handwheel        | Zamak          |
| 11   | ID plate         | Aluminium      |
| 12   | Handwheel washer | SS 304         |
| 13   | Handwheel nut    | SS 304         |

**STAINLESS STEEL GATE VALVE PN16**

SIZE ( in mm ) :

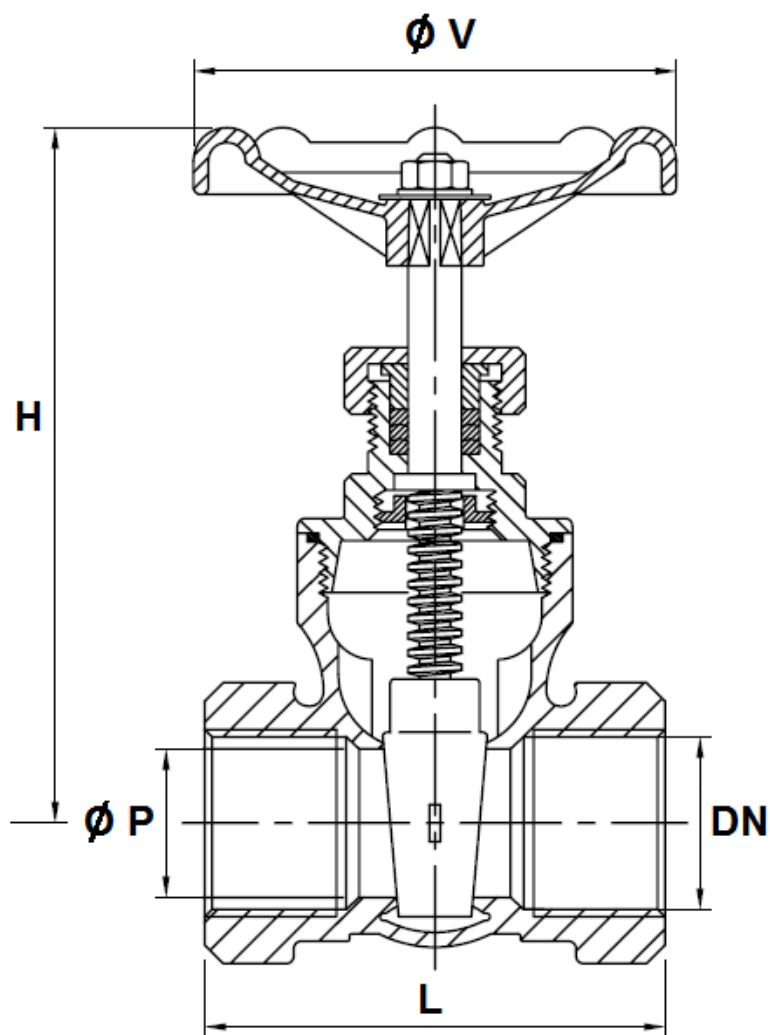

| Ref. | DN            | 1/2"  | 3/4"  | 1"    | 1"1/4 | 1"1/2 | 2"    |
|------|---------------|-------|-------|-------|-------|-------|-------|
| 106  | Ø P           | 15    | 20    | 25    | 32    | 40    | 50    |
|      | L             | 55    | 60.5  | 65.5  | 76.5  | 85.5  | 95.5  |
|      | H             | 92    | 97    | 108.5 | 123.5 | 146   | 162   |
|      | Ø V           | 70    | 70    | 80    | 80    | 90    | 100   |
|      | Weight ( Kg ) | 0.440 | 0.570 | 0.740 | 1.120 | 1.550 | 2.250 |

**STAINLESS STEEL GATE VALVE PN16**

**STANDARDS :**

Fabrication according to ISO 9001 :2008

DIRECTIVE 97/23/CE : CE n° 0038 Module H

Risk category I up to DN 1"1/4

Risk category II from DN 1"1/2 to DN 2"

Threaded female / female BSP cylindrical according to ISO 228/1

**ADVICE :** Our opinion and our advice are not guaranteed and SFERACO shall not be liable for the consequences of damages.  
The customer must check the right choice of the products with the real service conditions.

## STAINLESS STEEL GATE VALVE PN16

### INSTALLATION INSTRUCTIONS

#### GENERAL GUIDELINES :

Ensure that the valves to be used are appropriate for the conditions of the installation (type of fluid, pressure and temperature).

Be sure to have enough valves to be able to isolate the sections of piping as well as the appropriate equipment for maintenance and repair.

Ensure that the valves to be installed are of correct strength to be able to support the capacity of their usage.

**Installation of all circuits should ensure that their function can be automatically tested on a regular basis (at least two times a year).**

#### INSTALLATION INSTRUCTIONS :

**Before installing the valves, clean and remove any objects from the pipes** (in particular bits of sealing and metal) which could obstruct and block the valves.

**Ensure that both connecting pipes either side of the valve (upstream and downstream) are aligned (if they're not, the valves may not work correctly).**

**Make sure that the two sections of the pipe (upstream and downstream) match, the valve unit will not absorb any gaps. Any distortions in the pipes may affect the tightness of the connection, the working of the valve and can even cause a rupture.** To be sure, place the kit in position to ensure the assembling will work.

The theoretical lengths given by ISO/R7 for the tapping are typically longer than required, the length of the thread should be limited, and **check that the end of the tube does not press right up to the head of the thread.**

**Never use a vice to tighten the fixings of the valve.**

**If sections of piping do not have their final support in place, they should be temporarily fixed. This is to avoid unnecessary strain on the valve.**

**It may be necessary to screw the packing gland during using according to the type of use.**

**Do not use a tool to shut the valve**

**Fluids in the valve must not contain solid objects ( it could damaged the seat ).**

It's recommended to operate the valve ( open and close ) 1 to 2 times per year